
ANEMOSTAT®
AIR TERMINAL CONTROLS


SD - P - 0001

- SINGLE DUCT
- PNEUMATIC CONTROLS
- VAV COOLING
- PRESSURE DEPENDENT
- DIRECT ACTING THERMOSTAT
- NORMALLY CLOSED DAMPER
- OPTIONAL HOT WATER HEAT

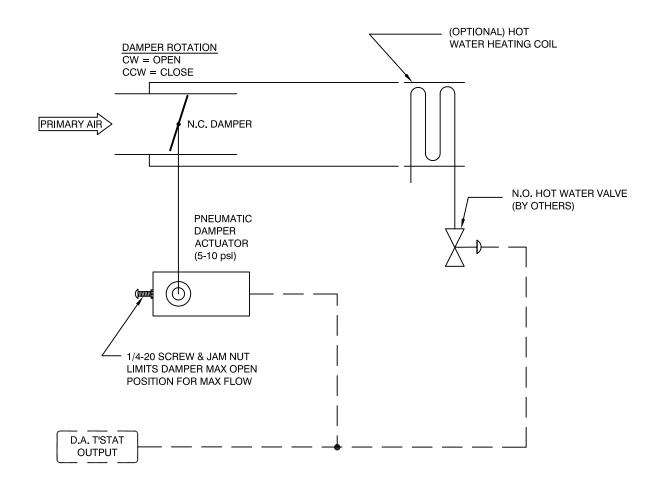

AIR FLOW ADJUSTMENT:

MINIMUM DAMPER POSITION IS SET WITH 0 PSI TO ACTUATOR, AND UNCOUPLING, POSITIONING, AND RETIGHTENING SHAFT TO COLLAR. MAXIMUM DAMPER POSITION IS ACHIEVED BY LIMITING ACTUATOR ROTATION. INSERT A 1/4-20 STROKE-STOP SCREW INTO THE END OF THE ACTUATOR TO THE DESIRED DEPTH.

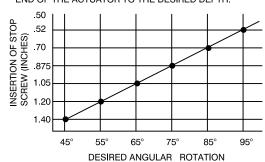

FACTORY PIPING
FIELD PIPING

REFER TO ANEMOSTAT "CONTROLS MANUAL" (CM-1) FOR ADJUSTMENT & TROUBLESHOOTING PROCEDURES.

JOB NAME: SUBMITTED BY:

DATE:

DWG #: SD-P-0001.1

REV: A

DATE: 12-13-11